
INSTALLATION GUIDE


BASIN TABLE

抬面組安裝說明

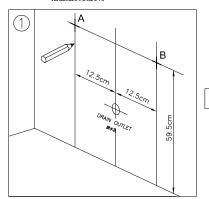


Mark two vertical lines A & B both sides 12.5cm from the center of drain outlet.

用鉛筆在距離牆上排水孔左右各12.5公分處,畫上垂直線.

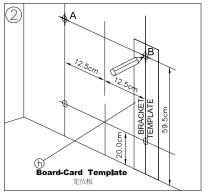


Use attached Board-Card Template to mark four circles for install **Brackets**. Before mark the four circles, please make sure the floor is square to the wall and ensure the height between marked-circles and floor are correct as shown on figure #2.

使用隨附的定位板,如圖②置放在垂直線上,並用鉛筆在牆上畫上四個圓圈 作爲鎖上固定基座的記號,在畫上記號前,必須注意牆角及地面是否平整且 與牆面垂直, 並再次確認四個記號間與地面的距離.

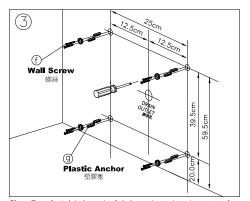


Place Bracket right in each of circle-marks and mark centers of mounting holes on wall. Using 6mm drill, drill holes in marked positions and Insert the Plastic Anchors flush with the wall, then Install four Brackets on wall for fixing Wooden Panels.

先將固定基座置放在牆壁圓形記號上, 描畫出要鑽孔的位置點, 鑽孔後崁入塑膠塞使之 齊平於牆面,再以螺絲把固定基座鎖緊.

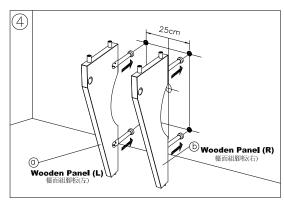


Screw each of Wooden Panels' tube-end caps clockwise onto four Brackets. Tighten each of tube-end caps.

將檯面組腳板末端的支架法蘭蓋,套入已經鎖在牆面上的固定基座,以順時鐘方向鎖緊於基座上

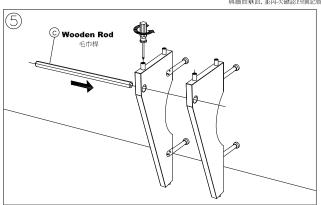


Loosen the two front screws back, the screws are situated inside of front adjustable pillars. ensure the front screws are back enough and the holes on Wooden Panels are unobstructed for pass through the Wooden Rod.

以逆時鐘方向鬆開在左右兩塊檯面組腳板前上方的螺絲,將螺絲調整到能使毛巾桿順利通過檯面組腳板洞口爲原則.

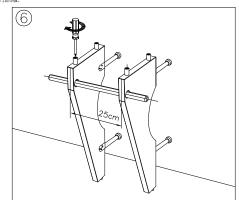


Slide the Wooden Rod though the holes of Wooden Panels on proper position, then hold 25cm between the centerline of two Wooden Panels and tighten front screws to fix Wooden Rod. 將毛巾桿穿過洞口, 調整到如圖面所示的適當位置後, 以順時鐘方向將螺絲鎖緊

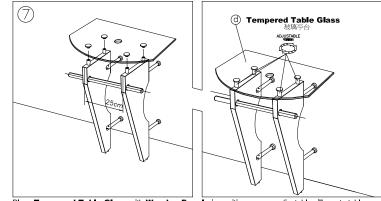

Place Tempered Table Glass with Wooden Panels in position, screws adjustable pillar onto table screws as figure shown. Level Tempered Table Glass by twisting adjustable pillar.

旋轉在檯面組腳板上方的可調整金屬柱, 將玻璃平台與檯面組腳板組合, 並調整桌面水平, 即完成檯面組裝.

FIXING CONTENTS

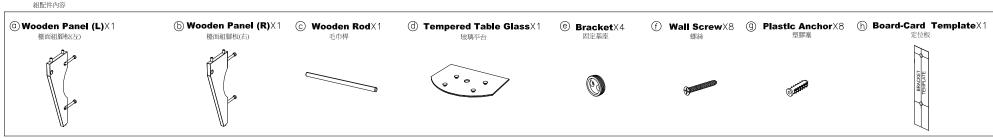

110708