


INSTALLATION INSTRUCTIONS

TOILET LID

馬桶蓋安裝說明

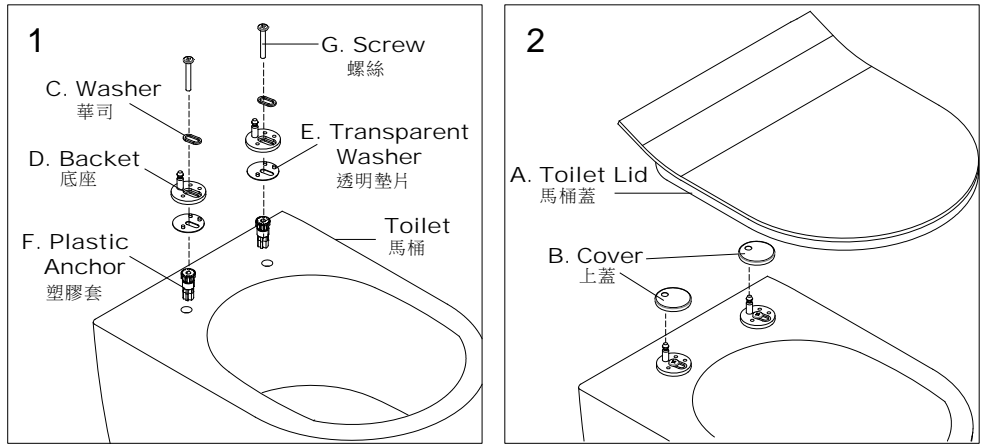

1. Insert the Plastic Anchors into the installing holes on the toilet. Assemble the Transparent Washer and Bracket together, place the Washer to the oval hole of Bracket, and then fix to Plastic Anchor with Screw.
將塑膠套塞入馬桶安裝孔，透明墊片與底座組合，將華司放到底座橢圓槽內用螺絲將底座鎖固定於馬桶上。

2. Complete the installation for two Brackets as step 1, adjust Screws to aim at 2 holes of Toilet Lid, and then tighten the Screws securely. Put two Covers onto the Brackets, and then press Toilet Lid on Brackets till hear the "CLICK" sound to complete the installation.
馬桶二個安裝孔都依據步驟1安裝後，跟馬桶蓋二孔對準後再鎖緊螺絲，將上蓋蓋在底座上，再裝上馬桶蓋，會聽見"咔"一聲，即完成安裝。

FIXING CONTENTS

組配件內容

