
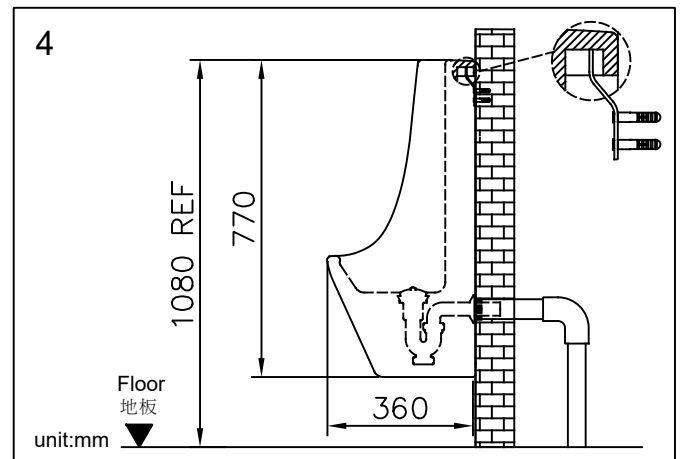
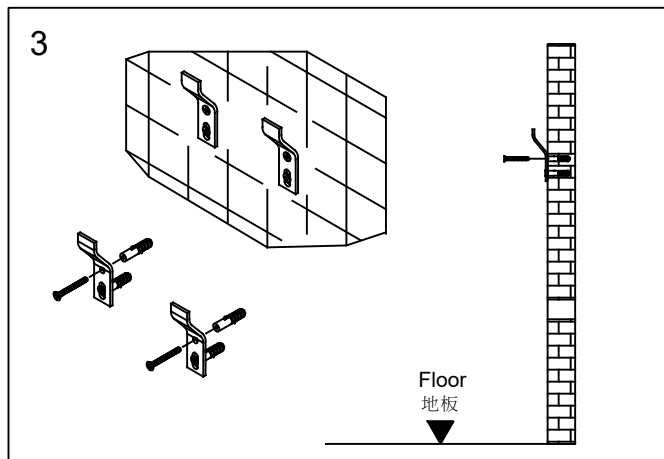
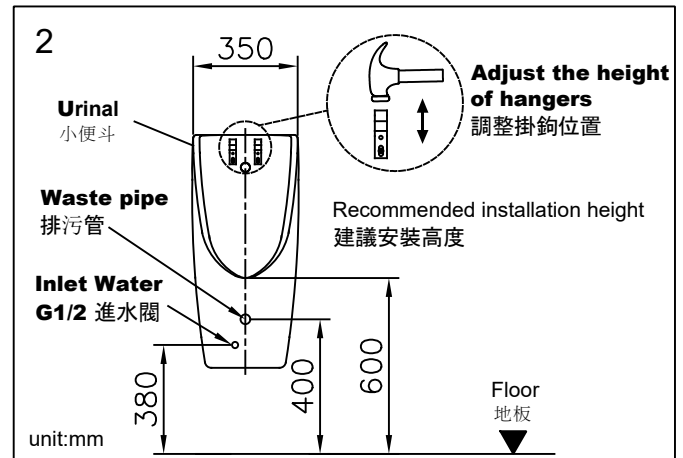


INSTALLATION INSTRUCTIONS

Urinal

小便斗安裝方式

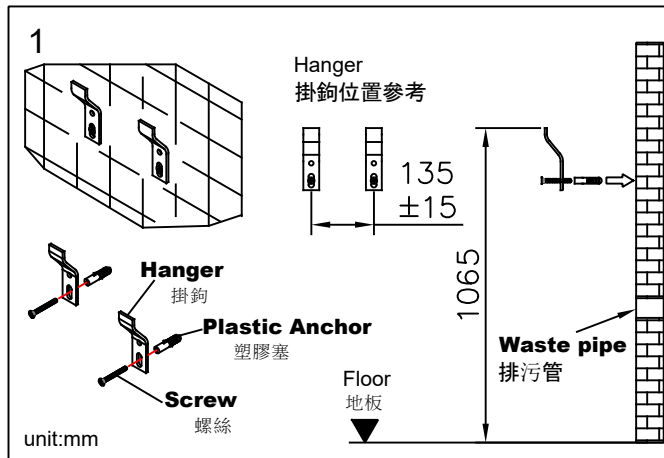

⚠ Please carefully confirm the installation instructions of the electromagnetic valve and urinal before installation.

安裝前請詳細確認所購買的沖洗電磁閥與小便斗的相關安裝方式。

1. Please confirm the relative position of the urinal and the water pipe. Use one screw respectively for fixing, and then install the hanger as shown.
先確認好小便斗安裝及排污口的相關位置，先各用1根螺絲固定，再依圖示安裝固定好掛鉤。
2. Hang the urinal to the fixed components, and make sure the water pipe from the urinal and outlet pipe on the wall are aligned. If not, please adjust the height of hangers with a hammer.
將小便斗掛到固好的掛件上並確認小便斗的排污管與牆面的排污口是否對齊，如果不對齊可以用錘子調整掛鉤位置。
3. After adjusting the hangers on both sides, remove the urinal, and fix the hanged components with the other two screws.
調整好二邊掛鉤後，取下小便斗再將另2根螺絲把掛件固定鎖緊固定。
4. Apply silicon sealant along waste pipe and external edge of the urinal.
沿著排污管周圍和小便斗周圍打上矽利康膠。

FIXING CONTENTS

組配件內容

