

INSTALLATION INSTRUCTIONS




PATENT NUMBER:

專利號碼:

D131972

US D606,172 S

Tow Handle Lavatory Faucet 雙把手檯面龍頭安裝說明

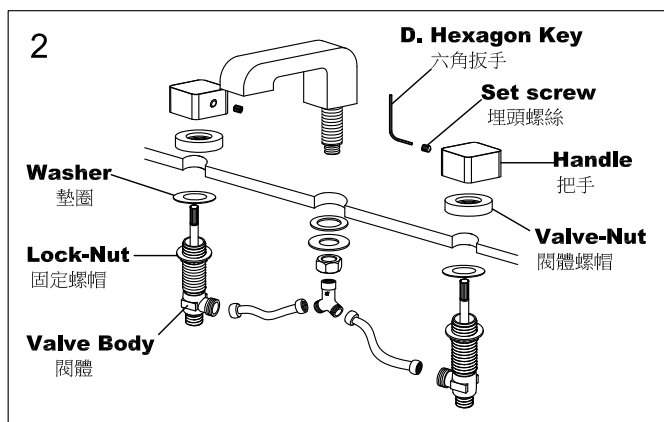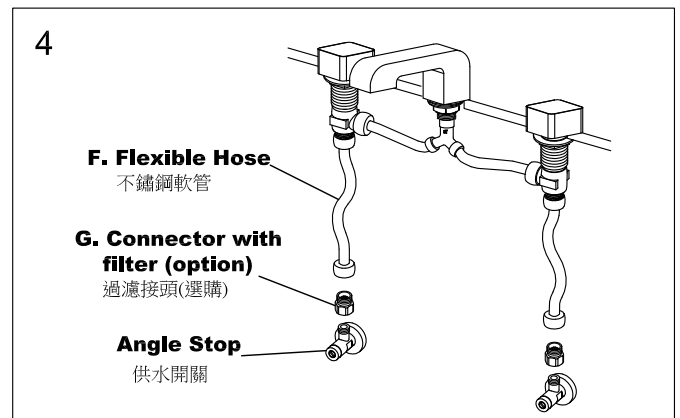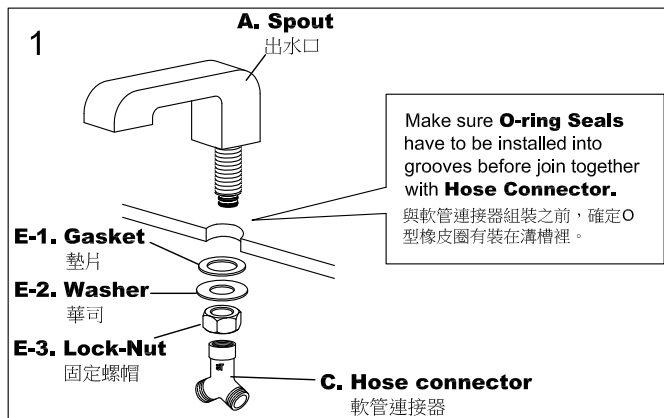


CAUTION : Risk Of Product Damage.
注意：為增加產品使用壽命，請依說明清潔供水管路。

a./ Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body. or b./ 安裝編織管之前，先把供水開關全開排水一分鐘。或 b./

b./ Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.

把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

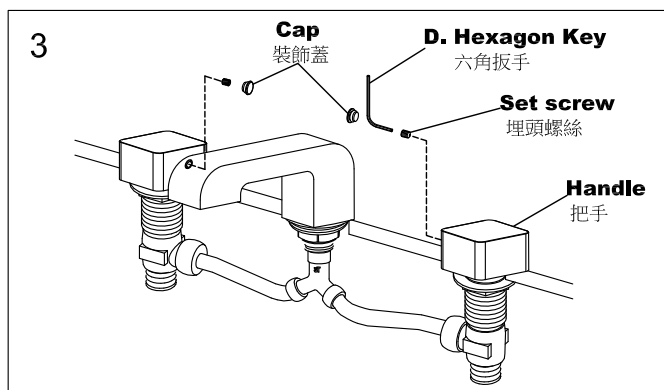

1. Insert **Spout** through the hole of deck, **Gasket** and **Washer**, secure **Spout** by tightening **Lock-Nut**, and then fasten **Hose Connector** as Fig. 1 shown.
如圖1所示，將出水口連同墊圈與華司從檯面上的孔穿過去並且用固定螺帽鎖緊出水口，然後將軟管連接器裝上去（與軟管連接器組裝之前確定O型橡皮圈有裝在溝槽裡）。
 2. Disassemble **Handles** with **Hexagon Key**, and remove **Valve-Nuts** from **Valves** before installing. Insert **Valves** from underside through the holes of deck and fasten **Valve-Nuts**, then align **Valves** so that the tee ends(outlet) face to **Spout** and secure **Valves** by tightening **Lock-Nuts** as Fig.2 shown.
如圖2所示，安裝前用六角扳手將把手拆下，並且從閥體上將閥體螺帽拆下。把閥體從檯面下方穿過孔並且鎖上閥體螺帽，然後將閥體的出水口端面向出水口並用固定螺帽鎖緊閥體。
 3. Ensure that **Handles** are properly aligned and **Valves** are in closed position, then tighten **Set screw** and insert **Cap**.
確定閥體開關都是關閉的並且把手都有對齊，然後鎖緊埋頭螺絲並且裝入裝飾蓋。
 4. Install **Connector with filter** onto the outlet of **Angle Stop** first, then connect **Flexible Hoses** from **Valves** to **Spout** and **Connector with filter**. (Fig.4)
- 先連接過濾接頭到進水開關，然後連接不鏽鋼軟管從閥體到出水口及過濾接頭。(圖4)

FIXING CONTENTS

組配件內容

