
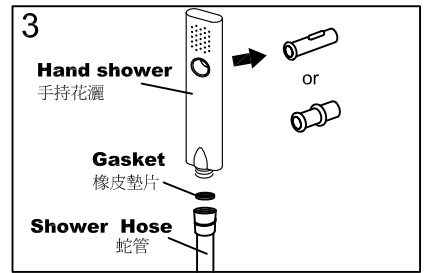
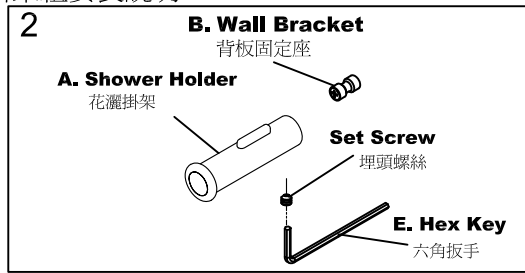


# INSTALLATION INSTRUCTIONS


## SHOWER HOLDER 花灑掛架組安裝說明

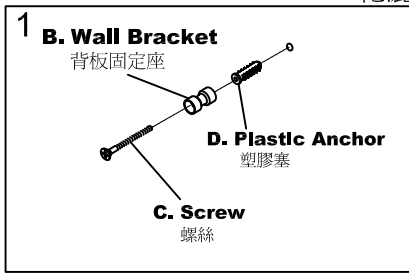

1. Select proper position for product and mark center of mounting hole on wall.  
請先選取預定安裝的位置,並在牆壁上畫上預定鑽孔記號。
2. Using a 6mm drill-bit, drill the holes in marked position to a depth of 4cm. Insert the **Plastic Anchor** into the holes on the wall, put the **Screw** through the **Wall Bracket** then screw into the **Plastic Anchor**.  
當安裝在水泥牆,使用1/4英寸鑽頭,鑽孔深度4公分,嵌入塑膠塞並使之齊平於牆面,將背板固定座以螺絲鎖緊在牆上。
3. Use the **Hex Key** to loosen the **Set Screw** in the **Shower Holder**. Slide the **Shower Holder** over the **Wall Bracket** and tighten **Set Screw** ensuring the orientation of the **Shower Holder** is correct as fig.2 shown.  
用隨附六角扳手先鬆開掛架下方的埋頭螺絲,使固定座能順利套進掛架組後,再鎖緊下方的埋頭螺絲,完成安裝程序如圖示2。




### FIXING CONTENTS

#### 組配件內容

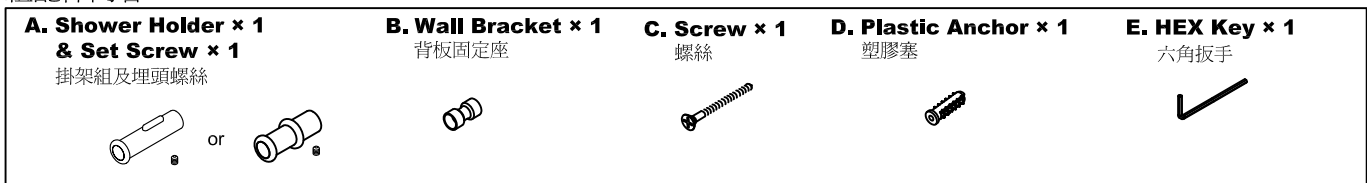

# INSTALLATION INSTRUCTIONS

## SHOWER HOLDER 花灑掛架組安裝說明

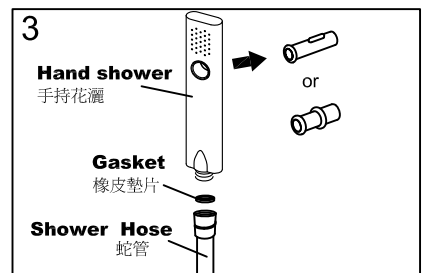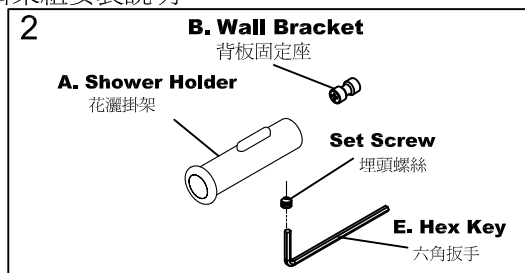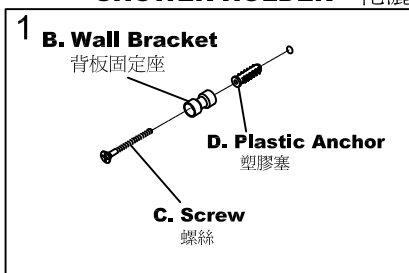

1. Select proper position for product and mark center of mounting hole on wall.  
請先選取預定安裝的位置,並在牆壁上畫上預定鑽孔記號。
2. Using a 6mm drill-bit, drill the holes in marked position to a depth of 4cm. Insert the **Plastic Anchor** into the holes on the wall, put the **Screw** through the **Wall Bracket** then screw into the **Plastic Anchor**.  
當安裝在水泥牆,使用1/4英寸鑽頭,鑽孔深度4公分,嵌入塑膠塞並使之齊平於牆面,將背板固定座以螺絲鎖緊在牆上。
3. Use the **Hex Key** to loosen the **Set Screw** in the **Shower Holder**. Slide the **Shower Holder** over the **Wall Bracket** and tighten **Set Screw** ensuring the orientation of the **Shower Holder** is correct as fig.2 shown.  
用隨附六角扳手先鬆開掛架下方的埋頭螺絲,使固定座能順利套進掛架組後,再鎖緊下方的埋頭螺絲,完成安裝程序如圖示2。

### FIXING CONTENTS

#### 組配件內容

